

Firmware Updating Instructions for SeaLife Micro HD / HD+ Underwater Camera

Firmware version V1.55 (HD+) and V2.55 (HD) released on August 5, 2015.

Fixes power ON and lock-up issues when battery is empty.

1. **Before starting firmware update, make sure camera's battery has at least 50% charge.**
2. **Download firmware for your camera model from the following link and save it to your PC desktop:**
Micro HD SL500 version V2.55: <https://www.dropbox.com/s/2i2dtksfhuhzj5j/sealifefw.bin?dl=0>
Micro HD+ SL501 version V1.55: <https://www.dropbox.com/s/fkvlv2kw5qw5im8/sealifefw.bin?dl=0>
3. **Connect camera to your PC using the USB cable.** For Windows PC, the camera memory drive "Removable disk (_:)" under "My Computer" menu. For Mac, the camera memory drive "NO NAME ___" on the desktop.
4. **Copy the "sealifefw.bin" file from your desktop and paste it to the "Removable disk (_:)" for PC , or "NO NAME ___" for Mac.**
Note: Make sure the "sealifefw.bin" file name has not been altered (must be "sealifefw.bin") and that it's located next to the DCIM folder, not inside the DCIM folder
5. **Disconnect the camera from PC.**
6. **Power on camera.**
7. **"Processing" appears on the display, indicating FW update is in progress.**
8. **It takes about 45 seconds to update.**
9. **FW file automatically deletes itself after the update is complete.**
10. **To confirm that the firmware has updated correctly, power on the camera, push the Menu key, select "System Settings" using the up/down keys and push shutter button to confirm. Use up/down key and scroll down to "Firmware Version:" (should read V1.55 for Micro HD+ or V2.55 for Micro HD).**