

Firmware Updating Procedure for SeaLife DC800 Digital Camera

Firmware version 1.2.08 fixes a bug which may cause the inner camera's flash to misfire when in Ext Flash Manual mode.

Firmware installation instructions

1. Prepare camera.
 - a. Download all images saved on the SD memory card to your computer before starting the firmware installation procedure.
 - b. Insert an empty SD memory card into camera.
 - c. Make sure camera's battery is fully charged before uploading new FW.
 - d. Connect camera to computer with the USB cable.
 - e. Turn camera power on.
 - f. When the camera LCD displays "USB/PC", push the SET button on the camera. The camera LCD screen will power off and you will notice the Status LCD stay green.
 - g. The camera should now be connected to the computer. To confirm, click the 'Start' menu on the computer and select 'My Computer'. You should see a drive named 'Removable Disk (_:)'
2. Save firmware to memory card
 - a. Click the following link and save the 'DS8460M.bin' file to the memory card 'Removable Disk (_:)'.
Download Link: <https://www.dropbox.com/s/iidyduqrprjy5eb/DS8460M.bin?dl=0>
 - b. The firmware should now be saved on your camera's SD memory card. To confirm, click on the drive named 'Removable Disk (_:)'. You should see a file named 'DS8460M.bin'. Note: Make sure the firmware file is not saved inside the DCIM folder. You should see the firmware file when you click 'Removable Disk (_:)'
 - c. Disconnect camera from the computer by turning camera power OFF.
3. Upload new firmware to your camera.
 - a. Keep the SD memory card in the camera
 - b. Push and hold the camera's shutter button while turning the camera power on.
 - c. When the red light on front of the camera starts blinking, release the shutter and power buttons.
 - d. The firmware is now uploading to the camera. This will take about 10 seconds.
 - e. When the red LED light [located next to the lens] stops blinking the firmware upload is complete. Turn the camera power off.
4. To upload firmware to more than one camera
 - a. Insert the SD memory card into other camera(s) and repeat step 3.
5. To delete the FW from the card.
 - a. Insert SD memory card into camera
 - b. Switch the camera to the playback mode (the slide switch is located on top of the camera)
 - c. Turn camera power on.
 - d. Push the Menu button and go to the Set-Up tab and select 'FORMAT'
 - e. Caution: Formatting the camera will delete all data on the memory card (images and firmware), so make sure images or other data is removed from card before formatting.
 - f. Select 'execute' to format the SD memory card.
6. Your camera is now updated and ready to use – ENJOY.