

Firmware Updating Instructions for SeaLife Micro HD / HD+ Underwater Camera

Firmware version V1.55 (HD+) and V2.55 (HD) released on August 5, 2015. Fixes power ON and lock-up issues when battery is empty.

1. Before starting firmware update, make sure camera's battery has at least 50% charge.
2. Download firmware for your camera model from the following link and save it to your PC desktop:
Micro HD SL500 version V2.55: <https://www.dropbox.com/s/2i2dtkfsluhzj5j/sealifefw.bin?dl=0>
Micro HD+ SL501 version V1.55: <https://www.dropbox.com/s/fkvlv2kw5qw5im8/sealifefw.bin?dl=0>
3. Connect camera to your PC using the USB cable. For Windows PC, the camera memory drive "Removable disk (_:)" under "My Computer" menu. For Mac, the camera memory drive "NO NAME ___" on the desktop.
4. Copy the "sealifefw.bin" file from your desktop and paste it to the "Removable disk (_:)" for PC , or "NO NAME ___" for Mac.
Note: Make sure the "sealifefw.bin" file name has not been altered (must be "sealifefw.bin") and that it's located next to the DCIM folder, not inside the DCIM folder
5. Disconnect the camera from PC.
6. Power on camera.
7. "Processing" appears on the display, indicating FW update is in progress.
8. It takes about 45 seconds to update.
9. FW file automatically deletes itself after the update is complete.
10. To confirm that the firmware has updated correctly, power on the camera, push the Menu key, select "System Settings" using the up/down keys and push shutter button to confirm. Use up/down key and scroll down to "Firmware Version:" which should be V1.55 for Micro HD+ or V2.55 for Micro HD.